

## How to Set up Schedule Table to Adjust Brightness via LEDSet


### Step 1

Run LEDSet on the computer



### Step 2

Click “Settings” on toolbar of LEDSet, and then select “Schedule Table”

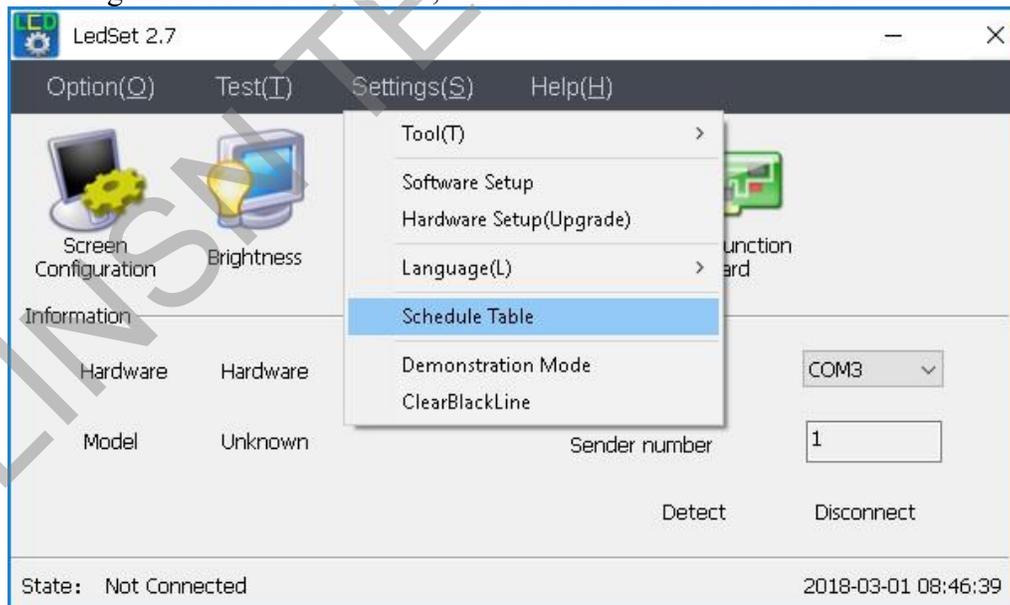


Official website: [www.linsn.com](http://www.linsn.com)

Add: Floor 15&16, Jiajiahao Business Building, No. 10168, Shennan Blvd,  
Nanshan District, Shenzhen

Tel: +86-0755-33985098


### Step 3

Enable “Schedule Table”, and then click “add” to start your schedule setup

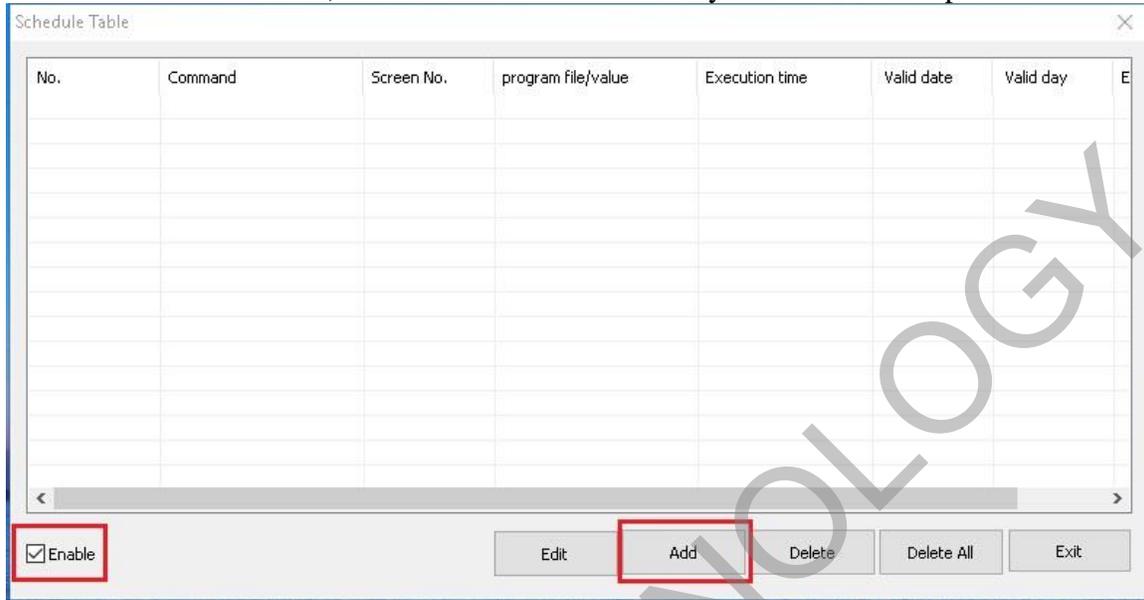

### Step 4

Choose “Adjust LED Screen Brightness” option in command list, and then set up “time”, “brightness” and “date” etc

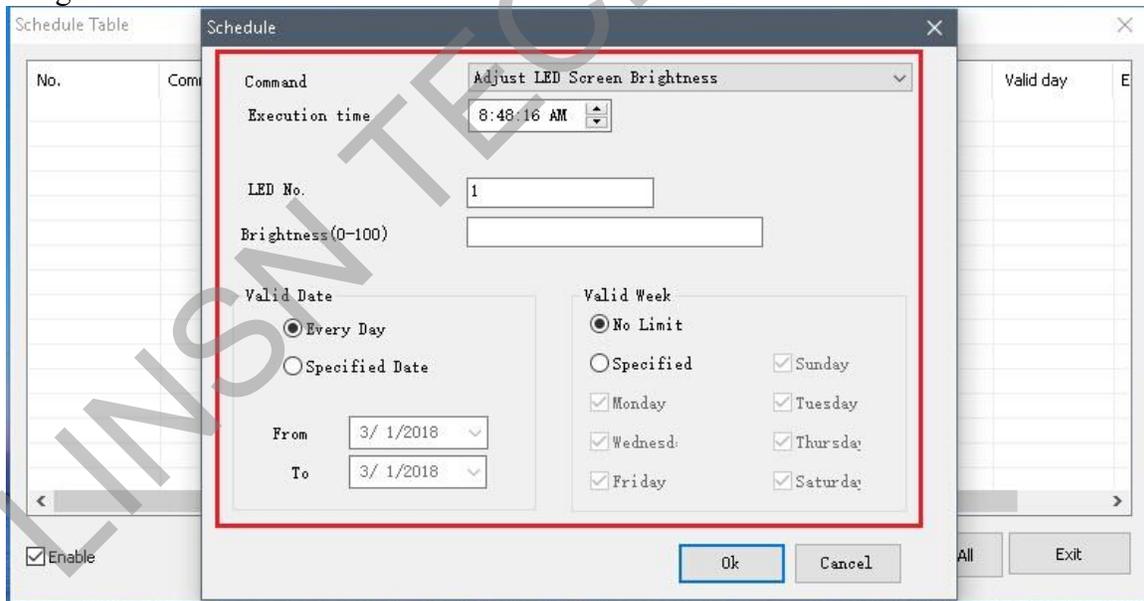

**Execution time:** execution time to adjust brightness

**Brightness (0-100):** brightness level that the screen needs to be adjust

**Valid date:** valid date to run the schedule


Official website: [www.linsn.com](http://www.linsn.com)

Add: Floor 15&16, Jiajiahao Business Building, No. 10168, Shennan Blvd,  
Nanshan District, Shenzhen

Tel: +86-0755-33985098

### Step 5

Back to schedule table interface, you'll see the list and information of schedule is there, now you finish the schedule setup, click "Exit", and software will running the schedule automatically.

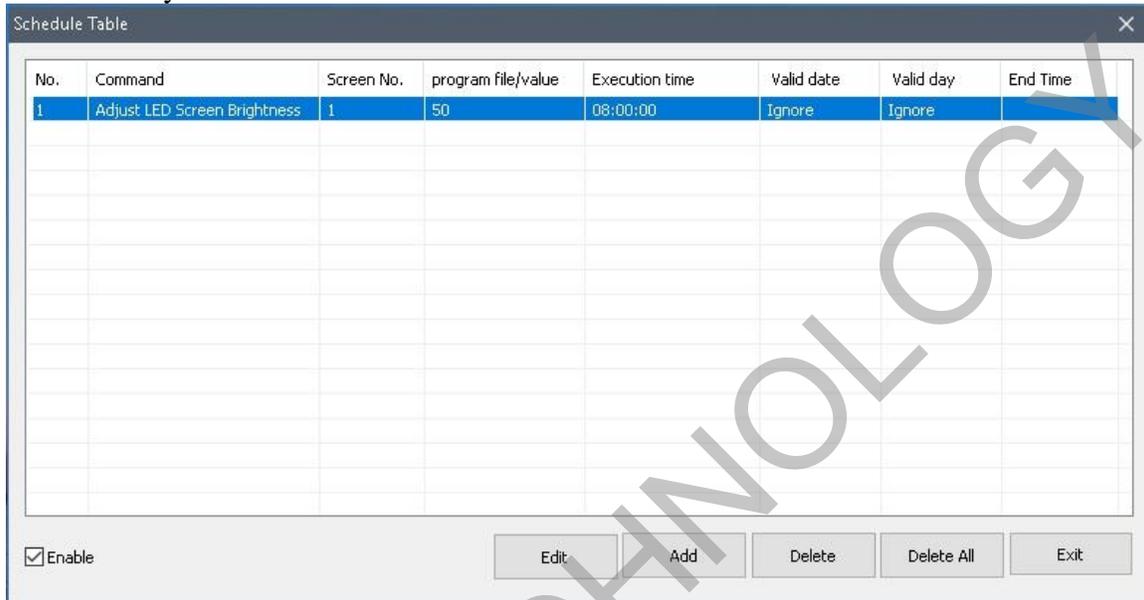

Official website: [www.linsn.com](http://www.linsn.com)

Add: Floor 15&16, Jiajiahao Business Building, No. 10168, Shennan Blvd,  
Nanshan District, Shenzhen

Tel: +86-0755-33985098