


How to set up brightness auto-adjustment via multi-function card

1. Hardware connection


Make sure your Multi-function card is connected between Sending card and Receiving card.

The green light should be flashing on Sender, Multi-function card and Receiver.

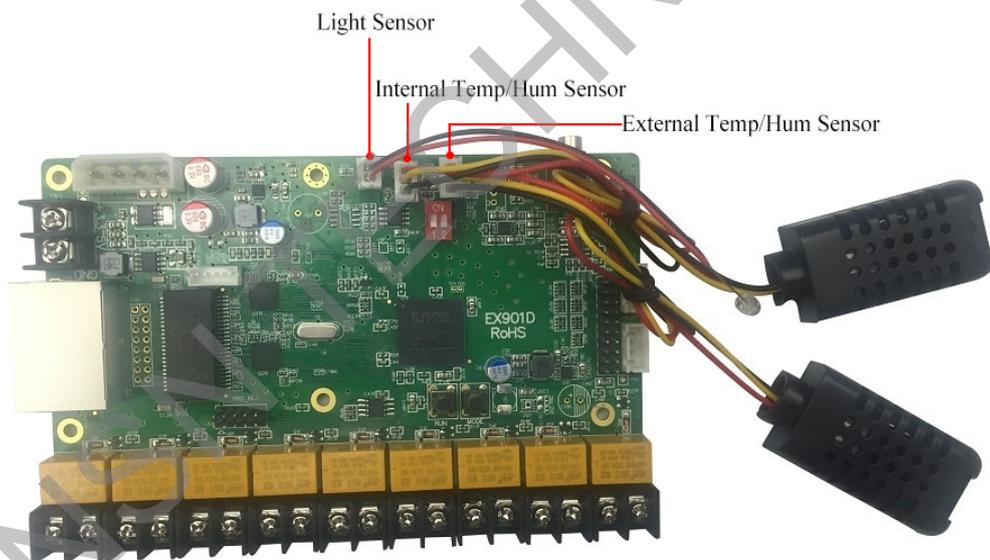


2. Software setup

- 1) Running software (LedSet) on your computer
- 2) Make sure sending card is recognized by software.
- 3) Then click “Screen Configuration”.

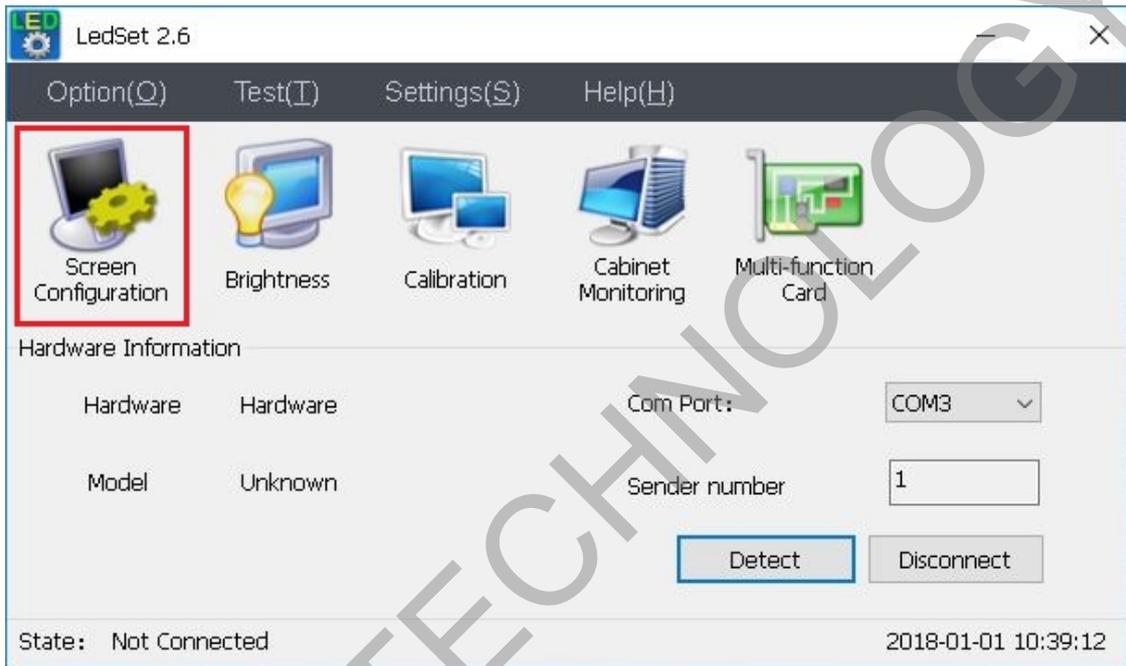




Tick “Enable Auto-adjust Brightness” on the interface of Sender, and then click “Save to Sender”.

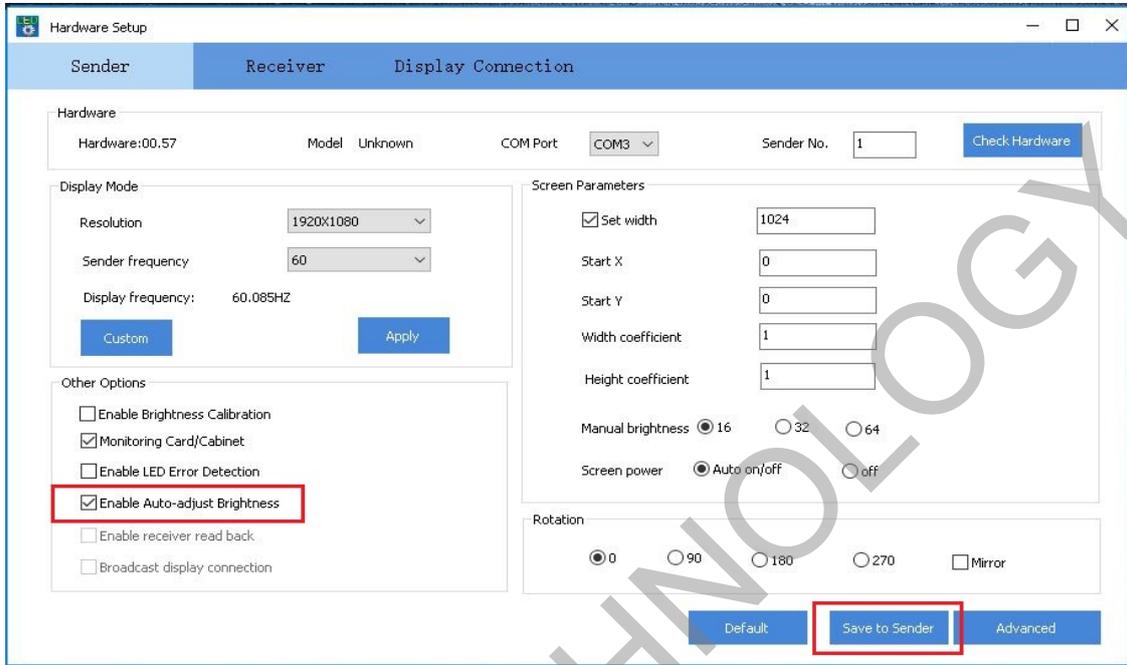


Click “Multi-function card”

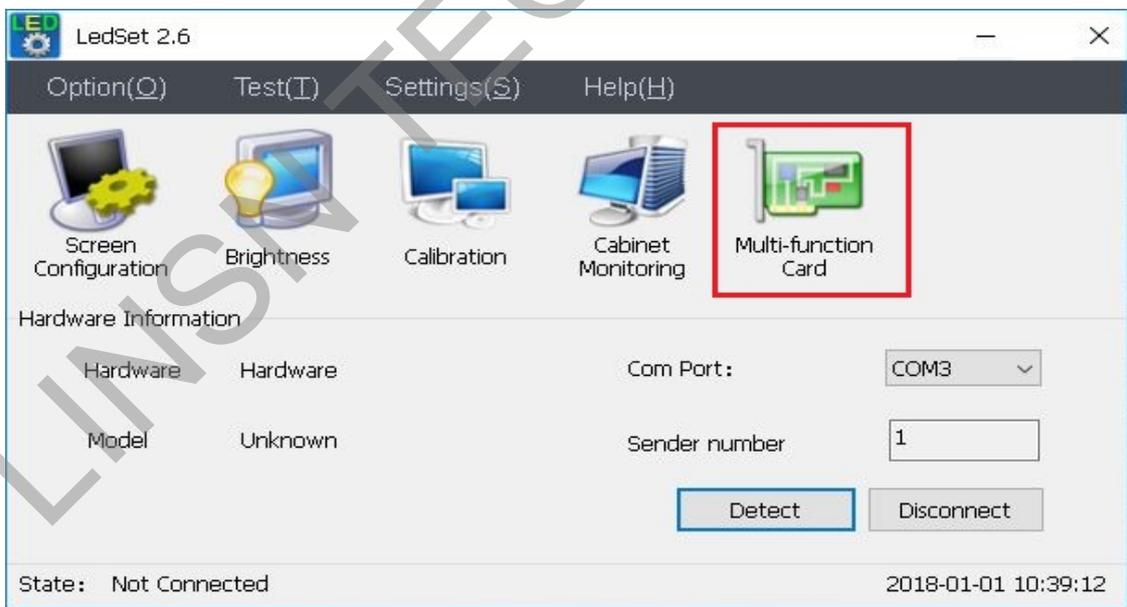

Enter the parameters setup interface of Multi-function card, you can set up the sensitivity of the light sensor, fan-on temperature and air condition-on



temperature and switch control etc; you can also monitor the humidity and temperature.

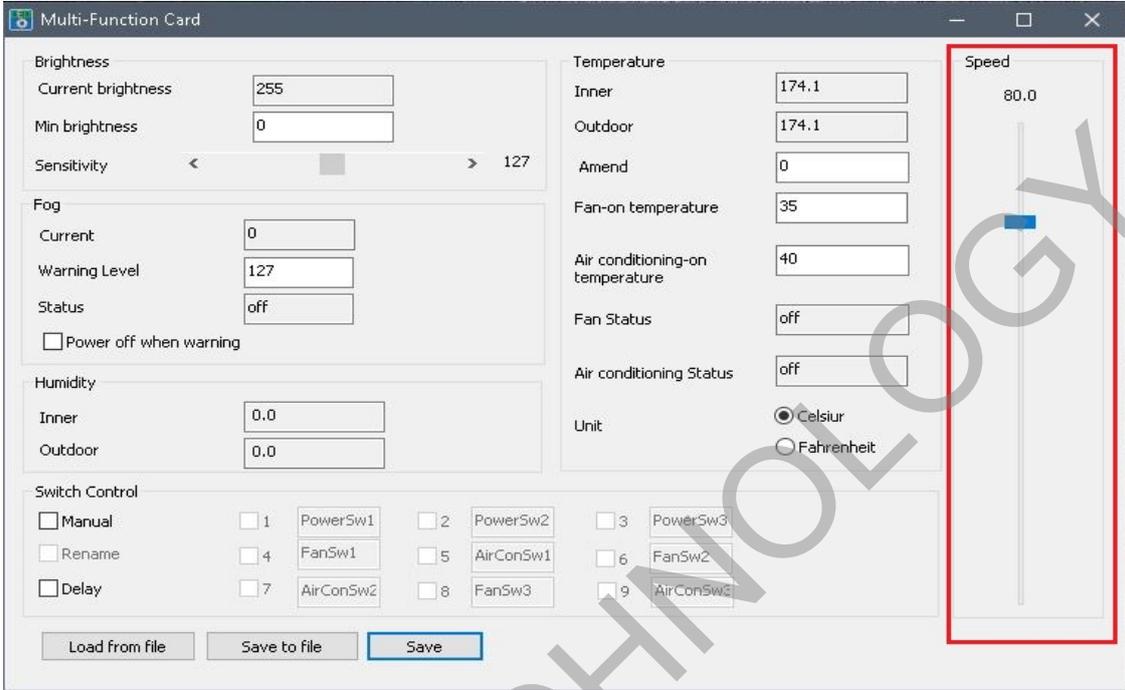

LINSN TECHNOLOGY